




Calibration Column Installation and Operating Instructions

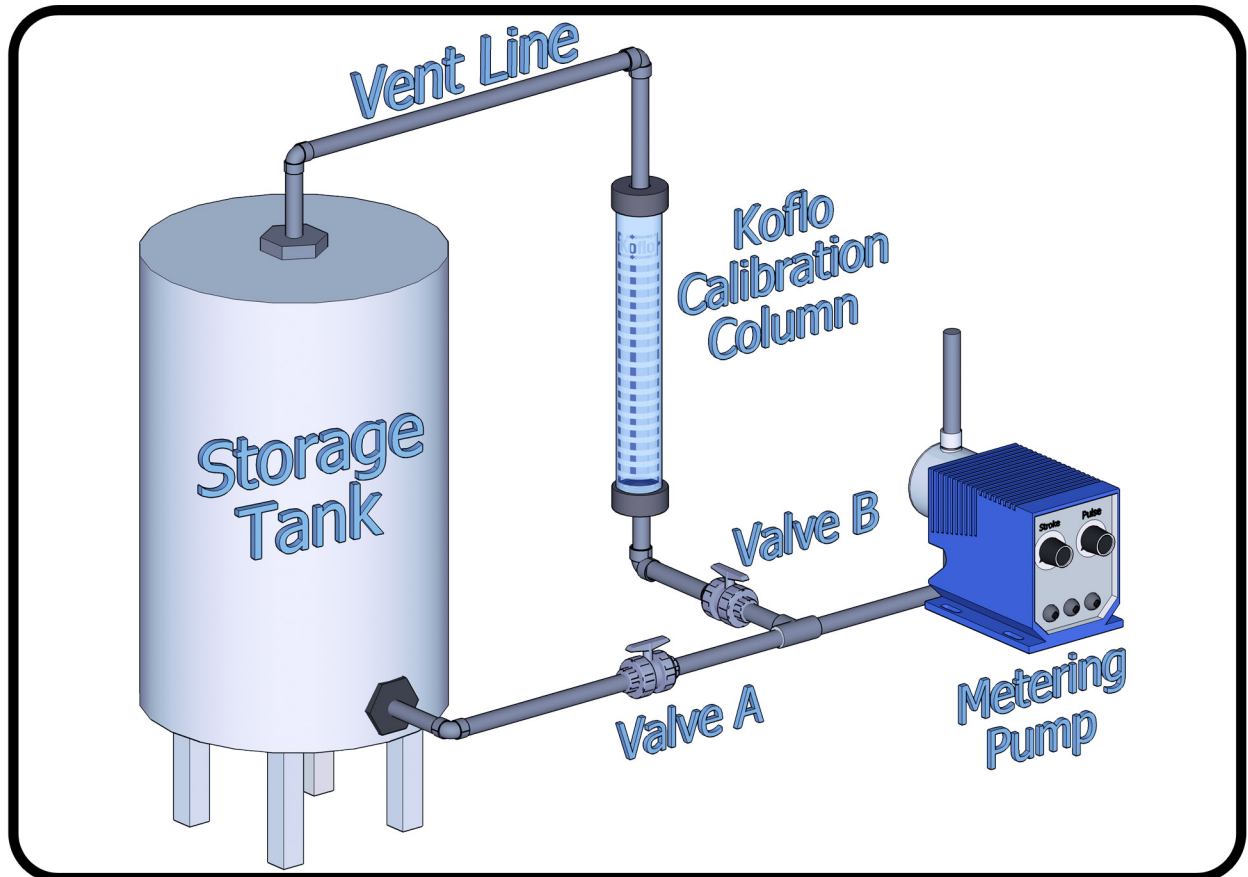

Operating Instructions

1. Install calibration column on the suction side of pump as shown above.
2. With valve A open and the pump operating, open valve B slowly until fluid level reaches the 0 mark.
3. Close valve A and begin timing with a stopwatch or wristwatch second hand.
4. At the one minute mark, observe fluid level. The observed level indicates the actual pump flowrate in mL/min and GPH.
5. When not in use, the calibration column should be drained, valve B closed, and valve A opened.